


Castle Alarms and Electronics

Manufacturers and suppliers of intruder alarm equipment

North Street, Winkfield, Nr. Windsor, Berks, SL4 4SY

Telephone Winkfield Row (0344) 886446 (5 lines)

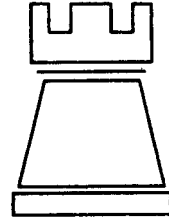

OPERATING INSTRUCTIONS - ZX 1250

- 1 'Supply On' LED illuminates to indicate the 240v Mains supply is functioning correctly.
- 2 Setting the system :
 - (i) After ensuring that all circuits are clear, turn keyswitch to position required (Part or Full System). The exit timer buzzer will sound for the pre-set exit time.
 - (ii) Leave the protected area by the prescribed route only. Ensure the buzzer stops after leaving the protected area. The pre-set exit time will automatically be extended as long as any part of the access circuit is left open.
 - (iii) Deviation from the prescribed exit route will activate the internal bell only. (999 System, where fitted, will NOT be activated).
 - (iv) If the system is switched on with a fault condition existing the buzzer will NOT sound, but after a few seconds silence, the internal bell will sound.
3. Re-Entry :
 - (i) The prescribed entry route must be followed, and the Control Panel switched off as quickly as possible—within the preset entry time. (During this period the entry buzzer will sound).
 - (ii) Deviation from the entry route, (or attempting to by-pass the prescribed initial entry point where appropriate) will result in an immediate, full alarm sounding (followed by a 999 police call where appropriate).
- 4 Tamper Alarm :

The tamper buzzer will be initiated in the key 'off' position by any tamper circuit being broken. This alarm may be silenced by turning the keyswitch to 'on' and 'off' again. The circuit LED will remain illuminated until the fault is cleared.
5. Personal Attack system will initiate a full alarm condition in ANY keyswitch position. The alarm may be silenced by (a) resetting the personal attack button, and (b) turning the keyswitch to 'on' and 'off' again.
6. Zones may be isolated by depressing the appropriate button immediately after switching the panel on. The zone LED will flash during exit time to confirm the zone isolation.
- 7 Following initiation of a Police call, no attempt should be made to use the panel (other than the personal attack system) until reset by the Engineer.